DECO MESH

Deco AX3000 Outdoor Mesh WiFi 6 Unit Setup

Manual

Deco AX3000 Outdoor Mesh WiFi 6 Unit Setup

Cable Deco with Modem

- Plug the main Deco into the modem with the Ethernet cable it came with.

- Power it on. Give it a minute.

- When the LED goes green or yellowish, the app should see it.

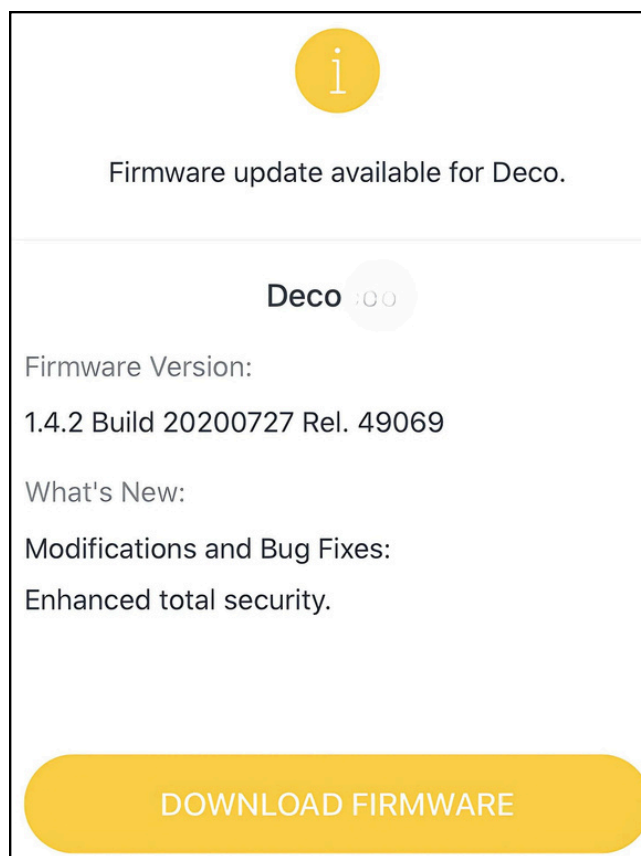- If not, hit the reset pinhole button at the back.

Setup through Deco App

- Download the Deco app. Don't even bother trying to do this from the web interface—TP-Link really wants you in that app. iOS or Android, doesn't matter.

- Open the app. It'll make you log in with a TP-Link account. If you don't have one, sign up—takes 30 seconds.

- Hit the big "+" icon. Pick your model. Scroll until you see AX3000 or X55 (same thing). The app will tell you to wait for the LED to flash yellow.

- It does this weird breathing thing. If it's solid, press the reset button for like 10 seconds.

- Once the light's right, the app starts looking for it via Bluetooth. Keep your phone close. If it can't find it, kill the app and restart—happened to me once.

- Next, pick your network name and password. This is where Deco is nice—one SSID for both 2.4 and 5 GHz. Don't overthink it.

- After that, the app does some firmware check. Let it update. Grab a coffee, it takes a couple minutes.

Firmware update available for Deco.

Deco :00

Firmware Version:

1.4.2 Build 20200727 Rel. 49069

What's New:

Modifications and Bug Fixes:
Enhanced total security.

DOWNLOAD FIRMWARE

- Once the main unit is up, add your other Decos. Same thing: plug them in, wait for yellow blinking, app finds them, done. They automatically mesh.

- Placement matters. The app nags you about it, but yeah, don't stick one in a dead zone expecting miracles. Line of sight if possible.

- When it's all green lights in the app, you're good. Run the speed test in-app. Mine matched my ISP speed on Wi-Fi, which is nice.

DECO MESH

THANK YOU

✉ support@deco-mesh.net

Scan the QR code to visit our website